



“DANCE AWAY THE DECAY” NEW DANCING TOOTHBRUSH HOLDER

Problem:

Brushing teeth for one minute, which is recommended by dentists, can be a difficult task for children. Although there are several current timers on the market, most of them are boring, difficult to use and don't always work properly.

Solution:

The “Dance away the Decay” toothbrush holder is a fun and interactive way for kids to brush their teeth for the dentist-recommended one minute. This musical, dancing character will dance to music on the sink for a set one minute to entertain kids while brushing their teeth. Additionally, their friendly, playful character will have an opening to hold a child's toothbrush.

Also includes an instruction sheet teaching children on how to properly brush their teeth.

Case Pack	12
Product Dimensions	4 ½”L x 3 ½”W x 5 ½”H
Master Case Dimension	16 ½” x 16” x 6 ¾”
Master Case Weight	8.5 lbs.
UPC Code	8-13132-01597-8
Cost/Unit	\$8.25

Distributed By:



5389 E. Provident Dr.
Cincinnati, OH 45246
866-346-2250